






## MOUNTING INSTRUCTION

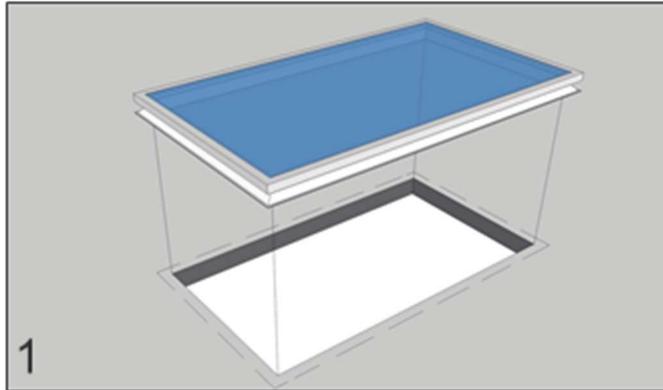


1. CENTER THE SKYLIGHT ON THE OPENING

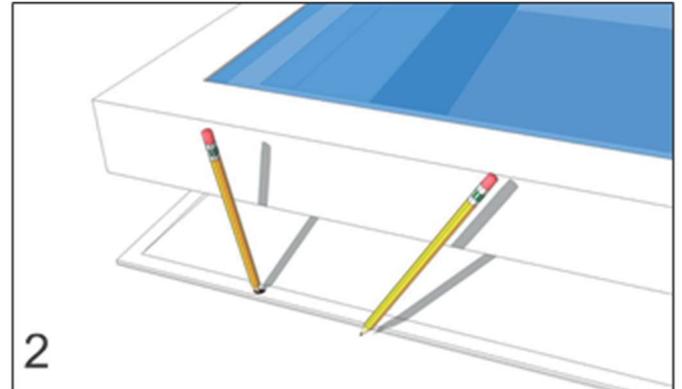


2. MARK THE HOLES IN THE BASE WITH A PENCIL OR FINE DRILL BIT. MARK THE OUTSIDE EDGE OF THE BASE

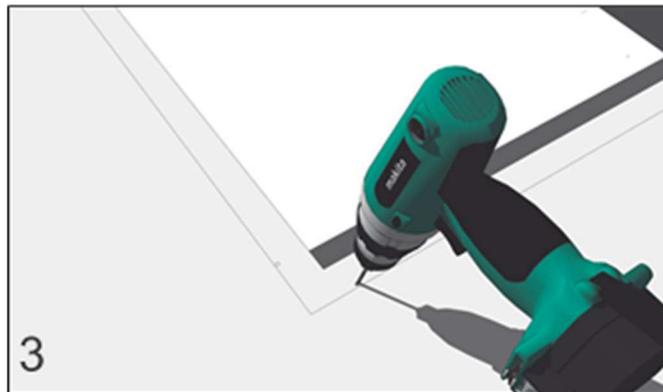


3. DRILL THE MARKED HOLES WITH A 6MM DRILL BIT AND INTRODUCE 6 MM DOWELS.

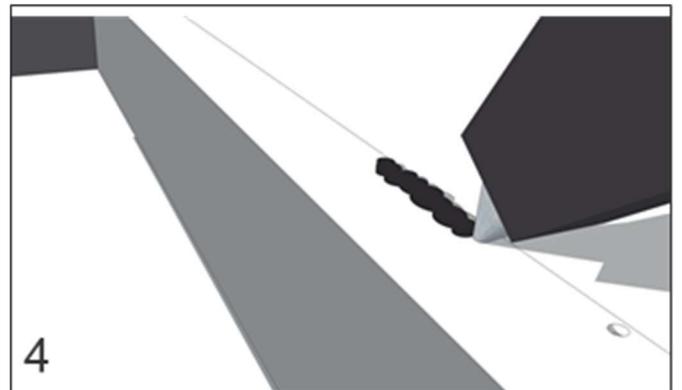

4. APPLY A SILICONE CORD OF APPROX. 1CM ON THE INSIDE OF YOUR MARK. FILL UP BREADS WITH SILICONE, USING POLIURETHANE SILICONE

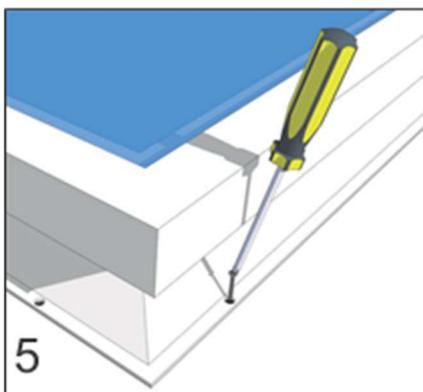

5. INSERT INOX SCREWS, 3.9 X 25MM, USING A CORRESPONDING SCREW BIT. PREFERABLY USE AN ELECTRIC DRILL AT LOW FORCE

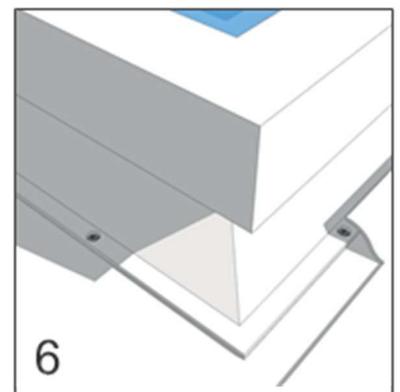

6. PERFORM A WATERPROOFING LAYER ABOVE THE SKYLIGHT BASE. IT IS IMPORTANT TO CARRY OUT THE SEALING, SILICONE CAN DEGRADE OVER YEARS